




ASSEMBLY MANUAL

Siegen SG1 (FinKey lock)


1. Disassembly of the drawer.

If the drawer will be anchored before programming the reader, plug it in and use the remote to open it. With the remote facing the reader's blue LED, press **0** then **OK**, the drawer will open automatically. In order to take out the drawer, remove the screw with an allen key (3mm), remove the bumper (**A**). Then move the lever of the rail to the left (**B**), pulling out the drawer at the same time.

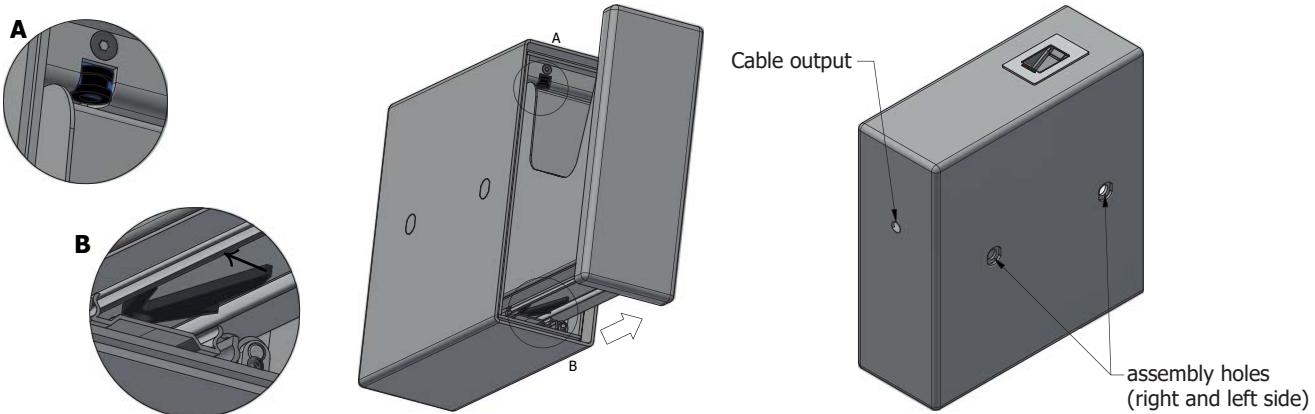

2. Anchoring the body to the wall.

In order to anchor the drawer, the holes plugs, which will be used, have to be removed (**C**). **Make sure the body is well-levelled after anchoring (**D**)**.

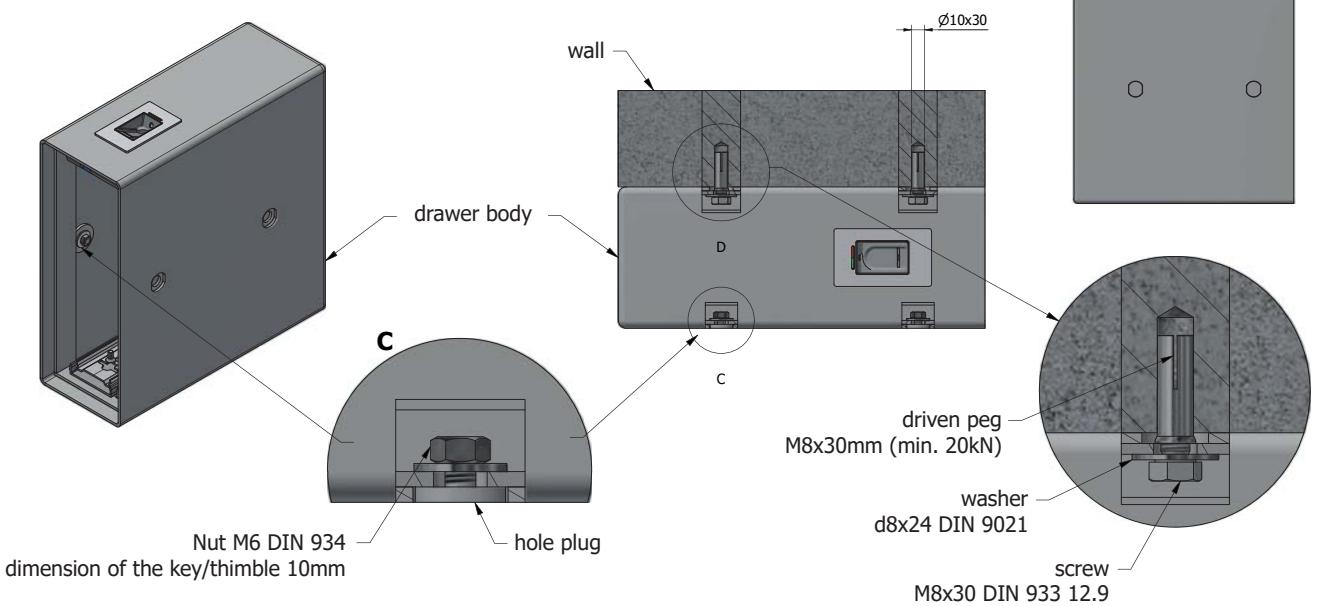

3. Assembly of the drawer in the body.

Make sure that the drawer hook (**E**) is in vertical position.

Hold the drawer vertically and slip the inner rail of the drawer into the outer rail of the body.

Slide the drawer completely into the cabinet until the rail clicks into place.

The drawer will close automatically, use your finger or the remote control to open it again.

The first slide inwards may require more force, but once the slides have interlocked, the drawer should slide in and out smoothly.

After checking for correct functioning, push in the drawer enough to fit the bumper (**F**).

